


Monitor Manual

(Project 53)

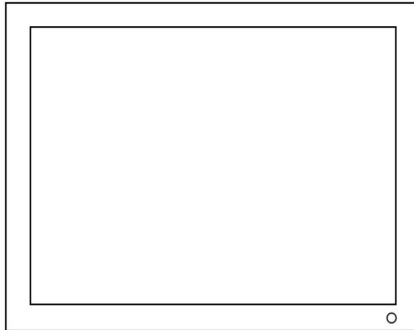

Dear Users,
Thank you for purchasing our products! Before using this product, please read the manual carefully.

- In this interface, press the right button [▶] to enter the sound item adjustment, the red option bar will appear, and then press the select button to select, you can switch the adjustment of the sound mode, balance, smart volume, and surround sound options, select the item to be adjusted in the red option bar, press the right button [▶] to enter the adjustment, then press the left and right buttons to adjust the value, the adjustment range is: 0-100, the normal value of the factory setting is: 50, after the item is adjusted, press the menu button [⏏] to exit.
- In this interface, press the right button [▶] to enter the time item adjustment, and then press the switch button [⏏] to select, you can switch the clock, shutdown time, start up time, timed shutdown, and automatic sleep. Press the switch button [⏏] to select the item to be adjusted, press the right button [▶] to enter, then press the left and right buttons to adjust the value, and cooperate with the switch button [⏏] to switch to a new line to select, and press the menu button [⏏] to exit after adjustment.
- In the current state, press the right button [▶] to enter the setting project adjustment, the option bar appears, and then press the selection key to select, you can switch: menu language, menu effects, blue screen, software upgrade, factory reset. Press the switch button [⏏] to select the item to be adjusted, press the right button [▶] to enter, then press the left and right buttons to adjust the value, and cooperate with the switch button [⏏] to switch to a new line to select, and press the menu button [⏏] to exit after adjustment.
- The menu language provides 9 kinds of language selection, press the right button [▶] to enter, press the switch button [⏏] to select the language, and then press the menu button [⏏] to exit.



Menu function introduction

- Press the power button [⏻] to turn the display on and off.
- Connect the required signal line and plug it into the corresponding interface. Press the switch button [⏏] to switch between computer, HDMI, video, BNC, and USB input signal sources, and then press the right button [▶] to select and complete the switch.
- Press the menu button [⏏] to display the menu as follows: press the switch button [⏏] to adjust the sub-item options, and press the right button [▶] to enter the image adjustment.



- Press the right button [▶] to enter the options, then press the right button [▶] to enter the image mode, the interface in the above picture is "image mode", press the switch button [⏏] to switch: dynamic, standard, soft, user, four modes, and then press the menu button [⏏] to complete the switch.

 


- In image adjustment interface, press the right button [▶] to enter the options, then press the right button [▶] to enter the image mode, the interface in the above picture is "image mode", press the switch button [⏏] to switch: dynamic, standard, soft, user, four modes, and then press the menu button [⏏] to complete the switch. In the image adjustment interface, press the right button [▶] to enter the options, the red option bar will appear, and then press the switch button [⏏] to select, you can switch the contrast, brightness, saturation, sharpness, color temperature, noise reduction options, and press the right button. Enter the adjustment, and then press the left and right buttons [◀]/[▶] to adjust the value, the adjustment range is: 0-100, the normal value of the factory setting is: 50, after adjustment, press the menu button [⏏] to exit.



USB function introduction

- Insert the USB flash drive into the USB port of the machine, press the switch button [⏏] to select USB, press the right button [▶] to enter, the display is as shown: Press the left button [◀], can move and choose: picture, music, movie, text, press the right button [▶] to enter the USB device, and then press the left button to read the file, if there is no matching related file, it will show: No file found! Press the menu button [⏏] to exit the device options.
- Press the left button [◀], select "MOVIE", press the right button [▶] to enter the USB device, and then press the left button [◀] to read the movie file, as shown in the figure, press the left button [◀] to select the available video in the U disk, press the right button [▶] enter, full screen play, press the right button [▶] while playing, the function option bar will appear, select stop to exit the playing state, and press the menu button [⏏] to return to the main menu.
- Press the "right button" [▶] in the playback state to enter the function option bar, press the left and right buttons [◀]/[▶] to switch the red option bar left and right to select the item, and press the switch button [⏏] to complete the function selection.



Debugging

Malfunction	Elimination methods
No power, light off	Check whether the power supply is connected and whether the connector is plugged in properly
No display, no signal	Check whether the signal source or signal cable and interface are well connected